

EVL PRO CONTROLLER & EVL PRO FIXTURES QUICK START GUIDE

PROGRAMMING SCENES AND CHASES:

Make sure the fixtures and controller are set up correctly as described in the "Using the EVL Pro Controller with EVL & Mad Products" guide.

Important points to note about scenes and chases on the EVL Pro controller:

Each 'Scene' and each 'Step' in a 'Chase' has its own 'Xfade' time and 'Chase Speed' time controlled using the speed sliders on the front panel. The time values are in seconds.

The Chase Speed time is the duration that the scene is active before another Scene or Chase is allowed.

The Xfade time only operates with the Joy stick channel and is the time it takes to reach the Joy stick position set for the scene.

The Xfade and Chase Speed times in each Step of the Chase, completely over-ride the Chase Speed times and Xfade times set in a Scene.

The channel sliders hold a memory of the last position (Grab Point) and as such, a channel requiring adjustment for the next Scene must be moved completely to the top and then the bottom to make sure it can be changed.

PROGRAMING A SCENE:

Make sure the white button 'A' is pressed until its LED is off.

Press the SCENE button.

Press the PROG button.

Enter the required scene number (1-300), start with 1 and press ENTER

Enter a scene name, using the telephone number pad. Press the '0' key to advance to the next letter.

Press ENTER key when Scene name is complete.

Move the Joy stick and sliders to the required setting for the Scene.

Use P1-P12 to select the heads that require setting in this Scene.

Set the Xfade time and Chase Speed time for the Scene using the speed sliders.

Press ENTER to store this Scene.

TO ACTIVATE THE SCENE:

Make sure the white button 'A' is pressed until its LED is off.

Press the SCENE button

Enter the Scene number and press the 'GO' button.

PROGRAMMING A CHASE:

A Chase is a sequence of Scenes so you will need to program at least two Scenes before programming a Chase.

Make sure the white button 'A' is pressed until its LED is off.

Press the CHASE button.

Press the PROG button.

Enter the required CHASE number (1-50), Start with 1.

Enter a CHASE name, using the telephone number pad. Press the '0' key to advance to the next letter.

Press ENTER key when Chase name is complete.

Enter the number for 1st SCENE in the Chase. 1-300 (In this case 1)

Set the Xfade time and Chase Speed time for the Scene using the speed sliders. (DO NOT PRESS ENTER)

Press the '+' key to move to the next step.

Enter the number for the next SCENE in the Chase ('2' in this case) and set the speed sliders again.

Press ENTER to store the CHASE or the '+' key to enter further SCENE steps.

TO ACTIVATE THE CHASE:

Make sure the white button 'A' is pressed until its LED is off.

Press the CHASE button

Enter the CHASE number (1-50) and press the 'GO' button.