











	1	2	3	4
%	DISH	GOBO	N/A	DIMMER
100%	FAST	SOUND ACTIVATED STROBE STROBE SPEEDS B/OUT		SOUND ACTIVATED PULSE FAST PULSE
75%		       		
50%	SLOW STOP SLOW	CUSTOM		SLOW PULSE FULL
25%		SCROLL GOBOS		
0%	FAST STOP	B/OUT		OFF